

## To Project Computer Display

- 1 Hold the PROJECTOR ON button for 1 second.
  - Remark: The LCD projector takes around 30 seconds to warm up.
- Press the SOURCE button until the screen shows PC1. (Select PC2 in case you use notebook computer)
- 3 Adjust the volume of the computer sound by pressing the VOLUME +/- buttons. (if necessary)

## To Project Video Signal

- Hold the PROJECTOR ON button for 1 second.

  Remark: The LCD projector takes around 30 seconds to warm up.
- Press the SOURCE button until the screen shows VIDEO. (for any video viewing, i.e.VHS, VCD, etc.)
- 3 Press the DVD/VCR button. (in order to select the video from the DVD/VCR player.)
- 4 Control the player by using the DVD/VCR PLAYER buttons.
- Adjust the volume of the video by pressing the VOLUME +/- buttons. (if necessary)

## After use,

please switch off the LCD projector by holding the PROJECTOR OFF button for 1 second.