

3 Adjust the volume of the computer sound by turning the labeled knob (if necessary).

## To Project Video Signal

- 1 Insert your video tape or video disc into the player.
- Hold the button Video(DVD/VHS) for 1 second (Remark: the LCD projector takes around 30 seconds to warm up).
- 3 Make sure that the audio-visual selector is on and is selected to input 1 (i.e. DVD/VHS).
- 4 Adjust the volume of the video by turning the labeled knob (if necessary).

## After use, please switch off the LCD projector by holding the Projector OFF button for 3 second.