


# 4/F AV Teaching Console

\* Location: TC402-407, Town Centre

\* Diagram of Semi-automatic Teaching Console ( 半 自 動 化 教 學 控 制 台 )

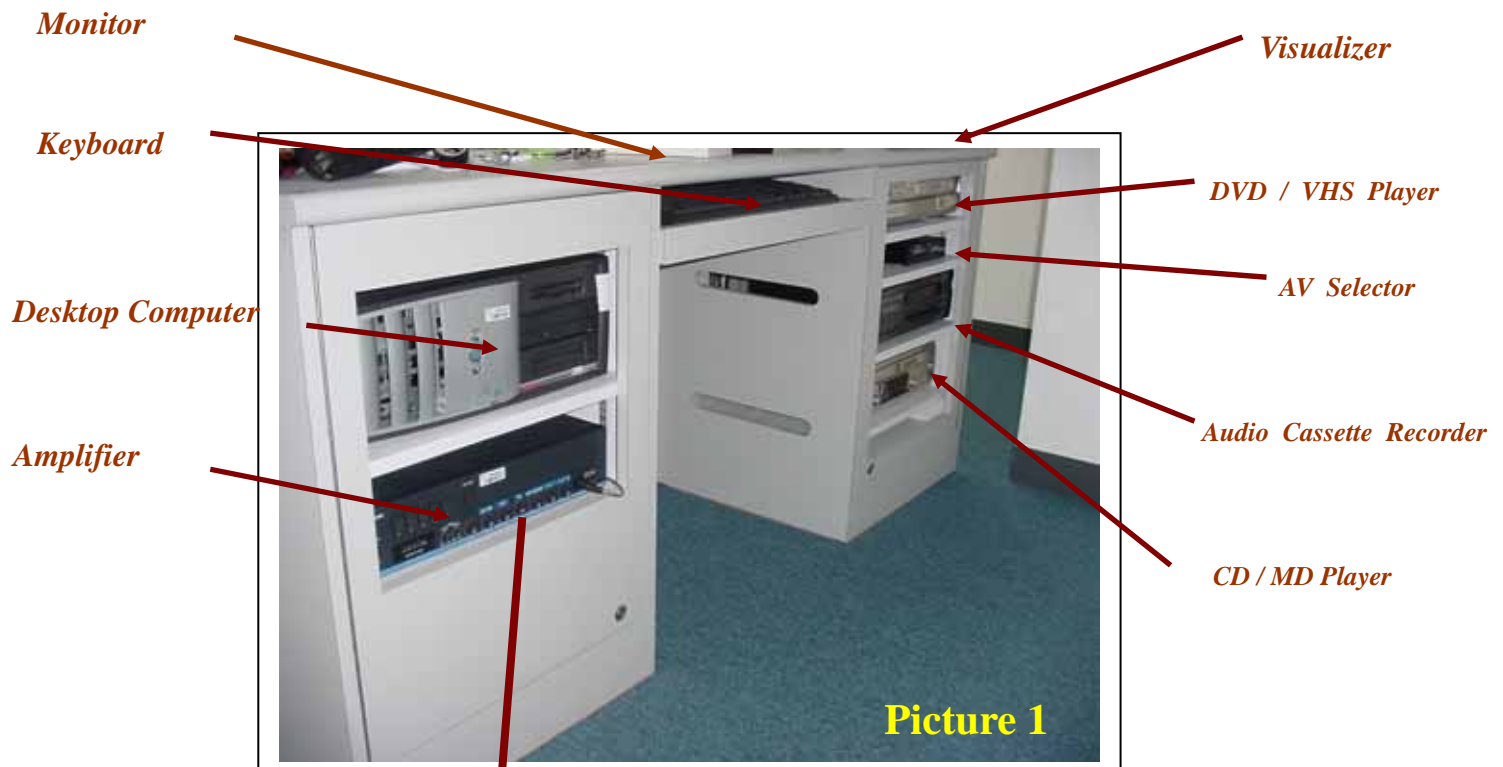

# 市區分校 Town Centre

## 半自動化教學控制台操作指引

### Instruction of Semi-automatic Teaching Console

步驟如下所述：

**The Procedure is as follows:**

1. 使用遙控器開啓液晶體投影機電源。  
Use remote control to switch 'ON' LCD Projector.
- 2a. 當使用桌面電腦或手提電腦，請開啓該器材的電源，然後使用遙控器控制液晶體投影機選擇 Computer (1) 或 Computer (2)。  
(註：手提電腦需要訊號線連接到教育控制台。)  
When use Desktop PC or Notebook, please turn its power 'ON', then select Computer 1 or Computer 2 mode respectively on LCD Projector by the remote control.  
(Remarks: Notebook needs to connect VGA port on teaching console by a VGA cable.)
- 2b. 當使用實物投影機或 VHS/DVD 機，請開啓該視聽器材的電源，然後使用遙控器控制液晶體投影機選擇 Video 及在選擇器按 VISU 鍵或 VHS/DVD 鍵。  
When use Visualizer or VHS/ DVD player, please turn its power on then select Video mode on LCD Projector by the remote control and then select VISU button or VHS/DVD button respectively on AV selector.
3. 大約 20 秒後，影音訊號便會投射在銀幕上。  
AV signal will appear on the screen around 20 seconds later.
4. 若需要播放、暫停、停止、向前捲帶、向後捲帶、向前快鏡或向後快鏡，請控制有關器材的控制面板。  
Apply Play, Pause, Stop, F-forward, Reverse and Skip +/- buttons on Control Panel of related equipment when needed.
5. 當使用完教學控制台或離開課室，請使用遙控器關掉各多媒體裝置及液晶體投影機。  
When finish using the AV equipment or class finishes, please turn AV equipment OFF and LCD Projector OFF by the remote control.
6. 當關掉液晶體投影機，請給予它 20 秒冷卻時間後，才可以重新啓動。  
When LCD projector is just switched 'OFF', please wait for 20 seconds before restarting the LCD Projector.

\* 若需要課室技術支援，請致電內線 8581 或到 308 室（資訊科技及服務處）尋求協助。

\* Should you need any technical support, please call ext.8581 or go to Room 308 (Office of Information Technology & Service).



遙控器使用步驟如下所述：

*The Procedure of remote control is as follows:*

### 遙控器

1 按遙控器的 **ON/STANDBY** 鍵，開啟液晶體投影機，  
等 20 秒。

2 按 **INPUT** 鍵，目錄表便投射在銀幕上。

3 按 **▼** 鍵


桌面電腦，選擇 **Computer (1)**

手提電腦，選擇 **Computer (2)**

錄影機，選擇 **Video**

4 按 **MENU/ENTER** 鍵確認，畫面便投射在銀幕上。

\* 當使用完畢，請按遙控器的 **ON/STANDBY** 鍵 **2 次**，關掉液晶體投影機。

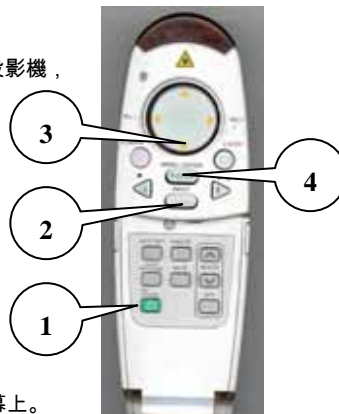

### Remote Control

1 Press the **ON/STANDBY** button on the remote control, to turn on the LCD projector  
and wait for 20 seconds.

2 Press the **INPUT** button, a list of input appears on the screen.

3 Press the **▼** button

Desktop Computer to select **Computer (1)**

Notebook Computer to select **Computer (2)**

Video Cassette Recorder to select **Video**

4 Press the **MENU/ENTER** button on the remote control to confirm, signal will appear on the screen.

\* After use, please turn off the LCD Projector by press the **ON/STANDBY** button **twice** on the remote control.

